

February 23, 2018

School District 68 (Nanaimo-Ladysmith)
395 Wakesiah Road
Nanaimo, BC V9R 3K6

ISSUED FOR USE
FILE: 704-ENW.VENW03150-01
Via Email: BHackwood@sd68.bc.ca

Attention: Brian Hackwood, Maintenance Manager

Subject: Domestic Water Testing (Lead) Inventory – Cilaire Elementary School

1.0 INTRODUCTION

Tetra Tech Canada Inc. (Tetra Tech) was retained School District 68 Nanaimo-Ladysmith (SD 68) to conduct a domestic water testing inventory at Cilaire Elementary School located in SD 68. Tetra Tech understands that the BC Ministry of Education has issued a directive to protect drinking water. The directive requires that a systematic investigation of public drinking water supplies at select schools in the District be undertaken. The investigation is based on procedures set forth by Health Canada modified per the Vancouver Island Health Authority (VIHA) guidelines, to ascertain risk and mitigation.

Tetra Tech understands that the sampling schedule, collection, testing and reporting of results needs to be completed by March 1, 2018 in order to allow sufficient time for SD 68 to implement mitigation measures prior to its deadline of March 31, 2018.

Mr. Brian Hackwood, Maintenance Manager with SD 68, provided Tetra Tech with authorization to proceed with the inventory on January 18, 2018.

2.0 METHODOLOGY

Tetra Tech completed the domestic water testing inventory program at Cilaire Elementary School on February 5th, 2018. The 2018 sampling program was conducted as per the protocols established during the 2016 program. The methodologies employed during the field program are detailed in the following subsections.

2.1 Sampling Locations

Tetra Tech reviewed plans for the facility prior to commencing the field work to identify potential sampling locations. The facility was then assessed in the field and sampling locations were selected based on the probability of human consumption at a location. The sampling locations included one point that was closest to the location where the water supply enters the building, one that is the furthest point from where the water supply enters the building and from points where human consumption of water occurred or was reasonably likely to occur. The sampling locations for Cilaire Elementary School are shown on the attached Figure 1.

Hallway drinking fountains and kitchen sinks were all considered to have a high probability of human consumption of water and were always sampled. Sinks with visible evidence of human consumption of water, such as water bottles, cups, or electric kettles were also considered to have a high probability of human consumption of water and were sampled. Although classroom sinks (including those with water fountains) were considered to have a moderate

to high probability of human consumption of water, only representative samples were collected as per the direction of SD 68 Maintenance Manager, Mr. Brian Hackwood. Classroom laboratory and art room sinks, where present, were considered to have a low probability of human consumption of water so only representative samples were collected. Finally, washrooms and utility sinks, unless there was other evidence of human consumption of water (such as an electric kettle) were considered to be a low probability of human consumption of water and only representative samples were collected.

2.2 Drinking Water Sampling

Sampling was conducted in the early hours of Monday, February 5th, 2018 in order collect water samples representative of an approximate worse-case scenario of water that had remained in contact with the school's plumbing over the course of a weekend. Two samples were collected at each sample location; the first collected immediately prior to any water line flushing (0 second sample); the second collected after thirty seconds of water line flushing (30 second sample).

The process for the sequence of analysis for a sample location is as follows:

- Only the pre-flush (0 second) sample is initially submitted for laboratory analysis;
- If the analytical result exceeds the *Guidelines for Canadian Drinking Water Quality* (GCDQG) Maximum Allowable Concentration (MAC), the 30 second sample would be submitted for further analysis; and
- If the 30 second sample analytical result exceeds the GCDQG MAC, additional samples would be collected after flushing with cold water for 2 minutes and 5 minutes at a subsequent sampling event and both samples submitted for analysis.

Water samples were collected directly from the sample point into clean, labeled, new laboratory-supplied. After collecting the water each sample then had preservative added for total lead. Sampling personnel wore new nitrile gloves prior to collecting each sample. Samples were kept in a cooler with ice after collection until being brought back to Tetra Tech's Nanaimo office, where samples not immediately submitted to the laboratory were stored in refrigerated conditions.

2.3 Analytical Testing

Samples were analyzed by Maxxam Analytics in Burnaby, British Columbia. Maxxam is a Canadian Association for Laboratory Accreditation (CALA) accredited laboratory that is qualified to analyze the samples using British Columbia Ministry of Environment (MOE)-approved procedures. All water samples submitted were analyzed for total lead.

2.4 Quality Assurance / Quality Control

During the sampling program, Tetra Tech implemented a Quality Assurance/Quality Control (QA/QC) program to ensure the integrity of the sampling methodology and analytical testing. The QA/QC program adhered to Tetra Tech's in-house Quality Management System (QMS), which was designed to generate representative samples, minimize the potential for cross-contamination between sampling locations and samples, and reduce the potential for systematic bias.

The QA/QC program included the following tasks:

- Recording the results of field activities in the field concurrently with the activities;
- Use of clean, new sampling gloves at each sampling location;
- Placing samples into new, labeled laboratory-supplied containers;
- Transporting samples to Maxxam in chilled coolers using chain-of-custody procedures;
- Using a Canadian Association for Laboratory Accreditation (CALA) accredited laboratory that is qualified to analyze the samples using MOE-approved procedures;
- Independently verifying the sample concentrations flagged by Maxxam as being greater than Health Canada guidelines by uploading laboratory results using ESdat, an environmental data management software, to minimize transcription errors; and
- Conducting a review of this report by a qualified senior Tetra Tech professional to ensure that the report meets Tetra Tech technical and reporting requirements.

Laboratory Quality Assurance / Quality Control Program

Water samples were submitted to Maxxam, a CALA accredited laboratory. Laboratory testing was conducted using methods outlined in the British Columbia Environmental Laboratory Manual. Laboratory QA/QC reports are attached to the laboratory reports presented in Appendix B. Samples included in the QA/QC reports consist of laboratory batches and will include random samples from the lab report and potentially other projects to complete a batch.

The Laboratories will note any sample deficiencies, such as unacceptable headspace, broken jars or bottles, etc. As well, the laboratory will measure the temperature of samples received by the laboratory in Burnaby.

Laboratory Duplicate – Relative Percent Difference (RPD)

A second aliquot is obtained from a randomly chosen sample. The aliquot is processed and the results expressed as the RPD between the two results. The purpose of the laboratory duplicate is to evaluate analytical precision and sample homogeneity. Tetra Tech formed the duplicate samples by alternately placing approximately 10% of the sample volume into the original sample container and then placing the same amount into the duplicate sample container. Tetra Tech continued placing additional aliquots of approximately 10% of the sample volume into each container until both containers were filled. RPDs should only be calculated and assessed when both the sample and the duplicate concentration is greater than five times the reportable detection limit (RDL), referred to as the Practical Quantification Limit (PQL).

The RPD calculations are discussed in Section 5.0. At Cilaire Elementary School, duplicate samples CIDUP-0s and CIDUP-30s were collected at CI15-0s and CI15-30s respectively.

3.0 ASSESSMENT STANDARDS

As per the guidance from the Vancouver Island Health Authority (VIHA), Tetra Tech compared the sample analytical results to the *Guidelines for Canadian Drinking Water Quality* (GCDQG) published by Health Canada, February 2017. The guidelines list a Maximum Acceptable Concentration (MAC) for lead of 0.010 mg/L (10 µg/L). The MAC for lead is based on chronic effects and is intended to apply to average concentrations in water consumed for extended periods. No immediately toxic concentration for lead is listed, however exposure to lead should nevertheless be kept to a minimum.

4.0 ANALYTICAL RESULTS

Tetra Tech collected water samples from Cilaire Elementary School on February 5th 2018. A total of 15 sample locations were identified; two samples were collected at each location (i.e., 0 second sample and 30 second sample). Fifteen (15) pre-flush (0 second) samples (plus one pre-flush duplicate) were submitted for laboratory analysis of total lead.

Nine of the 0 second samples contained concentrations of total lead that were greater than the GCDQG MAC.

Sample CI01 was collected from the sink opposite the door in the kitchen adjoining the gym, sample CI04 was collected from a sink in the base floor girl's washroom, sample CI07 was collected from a sink in the main floor girl's washroom, sample CI08 was collected from the drinking fountain within the sink in multi-purpose room A105, sample CI09 was collected from the drinking water fountain outside of multi-purpose room A105, sample CI10 was collected from the drinking fountain within the sink in kindergarten room A106, sample CI13 was collected from a sink in the upper floor boy's washroom, sample CI14 was collected from the drinking water fountain outside of special education room A205, and sample CI15 was collected from the drinking fountain within the sink in special education room A205.

The 30 second samples from the nine locations that exceeded lead concentrations in their 0 second samples were submitted for laboratory analysis. Sample CI12, collected from the drinking fountain within the sink in classroom A202, had the 0 second marginally below the MAC and also had the 30 second sample submitted for laboratory analysis out of caution.

The 30 second samples at all tested locations contained concentrations of total lead less than the GCDWQ MAC.

Sampling locations are shown on Figure 1. Laboratory testing results for Cilaire Elementary School are summarized in the table below. The complete laboratory certificate is provided as Appendix B with Cilaire Elementary School results found on included lab report R2512170 on page 3 and lab report R2518420 on page 3.

Table 1: Laboratory Testing Results

Sample ID	Sample Date	MAC	Total Lead (µg/L)
0 Second Samples			
CI01-0s	2/05/2018	10 µg/L	21.6
CI02-0s	2/05/2018		1.22
CI03-0s	2/05/2018		7.22
CI04-0s	2/05/2018		18.6
CI05-0s	2/05/2018		1.57
CI06-0s	2/05/2018		7.54
CI07-0s	2/05/2018		25.1
CI08-0s	2/05/2018		44.5
CI09-0s	2/05/2018		22.2
CI10-0s	2/05/2018		39.9
CI11-0s	2/05/2018		3.86
CI12-0s	2/05/2018		9.86**
CI13-0s	2/05/2018		12.4
CI14-0s	2/05/2018		33.8
CI15-0s	2/05/2018		77.7

Sample ID	Sample Date	MAC	Total Lead (µg/L)
CIDUP-0s*	2/05/2018		60.1
30 Second Samples			
CI01-30s	2/05/2018	10 µg/L	3.33
CI04-30s	2/05/2018		1.05
CI07-30s	2/05/2018		3.70
CI08-30s	2/05/2018		6.89
CI09-30s	2/05/2018		1.75
CI10-30s	2/05/2018		2.36
CI12-30s	2/05/2018		3.35
CI13-30s	2/05/2018		6.57
CI14-30s	2/05/2018		5.71
CI15-30s	2/05/2018		3.57
CIDUP-30s	2/05/2018		3.40
Notes:	Grey Fill	Exceeds GCDQG MAC	
*duplicate samples CIDUP-0s and CIDUP-30s were collected at CI15-0s and CI15-30s respectively			
**30 second sample tested due to being only marginally below the MAC			

5.0 DISCUSSION AND RECOMMENDATIONS

Tetra Tech's sampling program was based upon guidance from the Ministry of Health, found in the document *Guidance on Controlling Corrosion in Drinking Water Distribution Systems* (2009). The rationale is that for each sampling point, if the pre-flush (0 second) sample (Tier 1) contained elevated lead concentrations, it could indicate that the faucet or fittings are the likely source of lead. If a subsequent 30 second flush sample (Tier 2) contained elevated lead concentrations, the source of the lead would likely be the piping (plumbing) leading to the faucet; whereas low lead concentrations in the 30 second sample would further indicate that the source was likely the faucet and fittings. Finally, a 5 minute flush sample (if required) should be drawing water directly from the water supply piping within the building and would indicate if flushing is feasible for lowering the lead concentration in water within the building.

The Health Canada guidance recommend that Tier 2 sampling (30 second samples) take place when Tier 1 sampling identifies more than 10% of sites with lead concentrations above the MAC, and then only at the 10% of sampling sites with the highest lead concentration. Rather, Tetra Tech ran every 30 second sample for locations where the 0 second sample was above the MAC to show that flushing was adequate to lower the lead concentration in the drinking water at each point of concern.

The guidance from the Ministry of Health recommended that samples be collected after the sampling points had been stagnant for a minimum of 8 hours but not longer than 24 hours in order to simulate the worst case daily scenario for lead in drinking water consumption. Based on guidance from VIHA, SD 68 directed Tetra Tech to collect samples Monday mornings prior to any staff or students arriving at the facilities in order to simulate a worst-case scenario for stagnant water. As such, lead concentrations reported represent what could be expected following a weekend and would likely be lower on subsequent weekday mornings.

Nine of the 15 pre-flush (0 second) samples collected at Cilaire Elementary contained concentrations of lead greater than the GCDWQ MAC. Lead concentrations at sample locations CI01, CI04, CI07, CI08, CI09, CI10, CI12, CI13, CI14 and CI15 exceeded the MAC for the 0 second samples but were below the guideline for the 30 second samples.

As previously noted, where lead concentrations are elevated in 0 second samples, the contributing source is likely the fixture (i.e., faucet or fittings). Since lead concentrations at the locations noted above exceeded the MAC for the 0 second sample but not for the 30 second sample, there is potentially a lead source in the fixture.

Flushing is adequate to lower the lead concentrations at all sample points in Cilaire Elementary. Signage stating “Water Quality – First thing in the morning... Run the water for two minutes before drinking. Throughout the day... Let the water run until it is cold before drinking” should be maintained throughout the facility at each point where drinking water could be consumed.

At Cilaire Elementary School duplicate samples CIDUP-0s and CIDUP-30s were collected at CI15-0s and CI15-30s respectively. The RPD for the two sample pairs submitted were 25.5% (0 second sample) and 4.9% (30 second sample); which is below the 30% screening threshold as recommended by BC Ministry of Environment Q&A, and BC Environmental Laboratory Manual. Tetra Tech therefore considers the analytical results to be valid and re-sampling not necessary.

6.0 SUMMARY AND CONCLUSIONS

Nine pre-flush (0 second) samples (CI01, CI04, CI07, CI08, CI09, CI10, CI12, CI13, CI14 and CI15) collected at Cilaire Elementary contained concentrations of total lead greater than the GCDWQ MAC of 10µg/L (0.010 mg/L). After re-sampling, all of the previously noted samples had concentrations of lead below the MAC in the corresponding 30 second samples.

Tetra Tech recommends that SD 68 continue with its ongoing procedure of conducting a 2 minute flush at each drinking water consumption point each morning; and running taps/faucets until cold prior to consuming water. Signage stating “Water Quality – First thing in the morning... Run the water for two minutes before drinking. Throughout the day... Let the water run until it is cold before drinking” should be maintained at all water consumption points.

Tetra Tech recommends that the facility be inspected on a routine basis to ensure that the above noted signage is present and in good condition at each point where drinking water could be consumed. Tetra Tech further recommends that a bulletin be provided to staff summarizing the drinking water quality results at the facility and reminding them of the above procedure. Staff should then instruct students and visitors in the drinking water procedure.

7.0 CLOSURE

This report has been prepared based on the scope of work and for the use of School District 68, which includes distribution as required for the purposes for which this assessment was commissioned. The assessment has been carried out in accordance with generally accepted professional practice. No other warranty is made, either express or implied. Professional judgment has been applied in developing the recommendations in this report.

This report was prepared by personnel with professional experience in investigations of this nature and who specifically conducted the investigations at this Site. Reference should be made to the 'Geoenvironmental Report – Limitations on the Use of this Report' attached in Appendix A that forms a part of this report.

We trust this report meets your present requirements. If you have any questions or comments, please contact the undersigned.

Respectfully submitted,
Tetra Tech Canada Inc.



Darren Thomas, B.A.Sc., EIT.
Environmental Engineer
Environment Practice
Direct Line: 250.756.3966 x229
Darren.Thomas@tetrattech.com




Nigel Cavanagh, M.Sc., R.P.Bio., P.Biol.
Senior Aquatic Biologist
Environment Practice
Direct Line: 250.756.3966 x240
Nigel.Cavanagh@tetrattech.com

/dr

Attachments: Figure 1 - Cilaire Elementary School Sample Locations
Appendix A - Limitations on the Use of this Document
Appendix B - Laboratory Report

FIGURES

Figure 1 Cilaire Elementary School Sample Locations

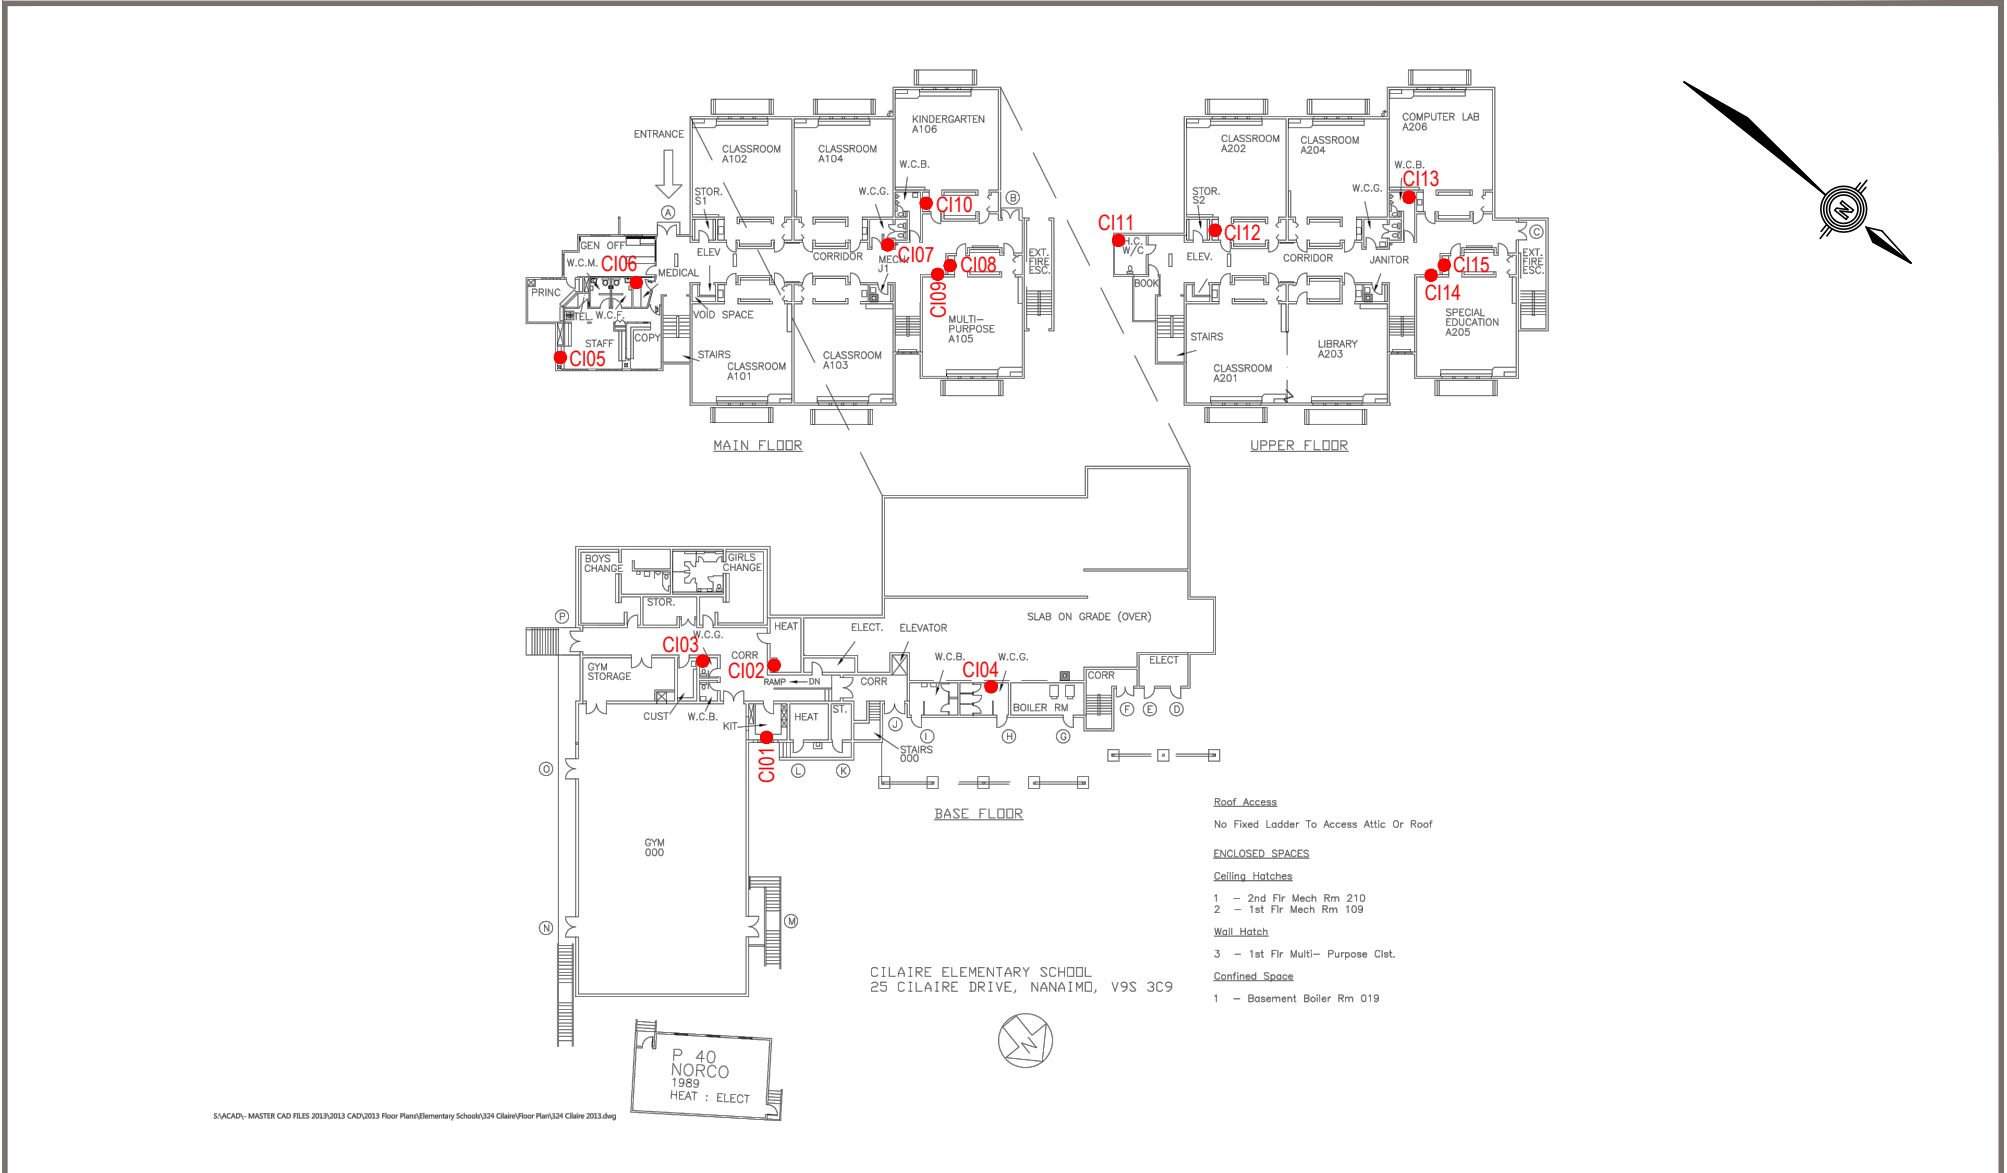

LEGEND: - SAMPLE LOCATION	NOTES BASED ON DRAWING PROVIDED BY CLIENT DRAWING IS NOT TO SCALE	CLIENT SCHOOL DISTRICT NO 68	DOMESTIC WATER TESTING LEAD INVENTORY				
			324 CILAIRE ELEMENTARY SCHOOL 25 CILAIRE DRIVE, NANAIMO BC				
			PROJECT NO. ENW.VENW03150-01	DWN MRV	CKD DT	REV 0	Figure 1
OFFICE EDM	DATE February 5, 2018						
STATUS ISSUED FOR USE		TETRA TECH					

APPENDIX A

LIMITATIONS ON THE USE OF THIS DOCUMENT

LIMITATIONS ON USE OF THIS DOCUMENT

GEOENVIRONMENTAL

1.1 USE OF DOCUMENT AND OWNERSHIP

This document pertains to a specific site, a specific development, and a specific scope of work. The document may include plans, drawings, profiles and other supporting documents that collectively constitute the document (the "Professional Document").

The Professional Document is intended for the sole use of TETRA TECH's Client (the "Client") as specifically identified in the TETRA TECH Services Agreement or other Contractual Agreement entered into with the Client (either of which is termed the "Contract" herein). TETRA TECH does not accept any responsibility for the accuracy of any of the data, analyses, recommendations or other contents of the Professional Document when it is used or relied upon by any party other than the Client, unless authorized in writing by TETRA TECH.

Any unauthorized use of the Professional Document is at the sole risk of the user. TETRA TECH accepts no responsibility whatsoever for any loss or damage where such loss or damage is alleged to be or, is in fact, caused by the unauthorized use of the Professional Document.

Where TETRA TECH has expressly authorized the use of the Professional Document by a third party (an "Authorized Party"), consideration for such authorization is the Authorized Party's acceptance of these Limitations on Use of this Document as well as any limitations on liability contained in the Contract with the Client (all of which is collectively termed the "Limitations on Liability"). The Authorized Party should carefully review both these Limitations on Use of this Document and the Contract prior to making any use of the Professional Document. Any use made of the Professional Document by an Authorized Party constitutes the Authorized Party's express acceptance of, and agreement to, the Limitations on Liability.

The Professional Document and any other form or type of data or documents generated by TETRA TECH during the performance of the work are TETRA TECH's professional work product and shall remain the copyright property of TETRA TECH.

The Professional Document is subject to copyright and shall not be reproduced either wholly or in part without the prior, written permission of TETRA TECH. Additional copies of the Document, if required, may be obtained upon request.

1.2 ALTERNATIVE DOCUMENT FORMAT

Where TETRA TECH submits electronic file and/or hard copy versions of the Professional Document or any drawings or other project-related documents and deliverables (collectively termed TETRA TECH's "Instruments of Professional Service"), only the signed and/or sealed versions shall be considered final. The original signed and/or sealed electronic file and/or hard copy version archived by TETRA TECH shall be deemed to be the original. TETRA TECH will archive a protected digital copy of the original signed and/or sealed version for a period of 10 years.

Both electronic file and/or hard copy versions of TETRA TECH's Instruments of Professional Service shall not, under any circumstances, be altered by any party except TETRA TECH. TETRA TECH's Instruments of Professional Service will be used only and exactly as submitted by TETRA TECH.

Electronic files submitted by TETRA TECH have been prepared and submitted using specific software and hardware systems. TETRA TECH makes no representation about the compatibility of these files with the Client's current or future software and hardware systems.

1.3 STANDARD OF CARE

Services performed by TETRA TECH for the Professional Document have been conducted in accordance with the Contract, in a manner

consistent with the level of skill ordinarily exercised by members of the profession currently practicing under similar conditions in the jurisdiction in which the services are provided. Professional judgment has been applied in developing the conclusions and/or recommendations provided in this Professional Document. No warranty or guarantee, express or implied, is made concerning the test results, comments, recommendations, or any other portion of the Professional Document.

If any error or omission is detected by the Client or an Authorized Party, the error or omission must be immediately brought to the attention of TETRA TECH.

1.4 DISCLOSURE OF INFORMATION BY CLIENT

The Client acknowledges that it has fully cooperated with TETRA TECH with respect to the provision of all available information on the past, present, and proposed conditions on the site, including historical information respecting the use of the site. The Client further acknowledges that in order for TETRA TECH to properly provide the services contracted for in the Contract, TETRA TECH has relied upon the Client with respect to both the full disclosure and accuracy of any such information.

1.5 INFORMATION PROVIDED TO TETRA TECH BY OTHERS

During the performance of the work and the preparation of this Professional Document, TETRA TECH may have relied on information provided by persons other than the Client.

While TETRA TECH endeavours to verify the accuracy of such information, TETRA TECH accepts no responsibility for the accuracy or the reliability of such information even where inaccurate or unreliable information impacts any recommendations, design or other deliverables and causes the Client or an Authorized Party loss or damage.

1.6 GENERAL LIMITATIONS OF DOCUMENT

This Professional Document is based solely on the conditions presented and the data available to TETRA TECH at the time the data were collected in the field or gathered from available databases.

The Client, and any Authorized Party, acknowledges that the Professional Document is based on limited data and that the conclusions, opinions, and recommendations contained in the Professional Document are the result of the application of professional judgment to such limited data.

The Professional Document is not applicable to any other sites, nor should it be relied upon for types of development other than those to which it refers. Any variation from the site conditions present, or variation in assumed conditions which might form the basis of design or recommendations as outlined in this report, at or on the development proposed as of the date of the Professional Document requires a supplementary investigation and assessment.

TETRA TECH is neither qualified to, nor is it making, any recommendations with respect to the purchase, sale, investment or development of the property, the decisions on which are the sole responsibility of the Client.

1.7 NOTIFICATION OF AUTHORITIES

In certain instances, the discovery of hazardous substances or conditions and materials may require that regulatory agencies and other persons be informed and the client agrees that notification to such bodies or persons as required may be done by TETRA TECH in its reasonably exercised discretion.

APPENDIX B

LABORATORY REPORT

Your Project #: ENW.VENW03150-01
Site Location: 2018 DRINKING WATER

Attention: Darren Thomas

TETRA TECH CANADA INC.
#1 - 4376 BOBAN DRIVE
NANAIMO, BC
Canada V9T 6A7

Your C.O.C. #: 541404-04-01, 541404-05-01, 541404-06-01

Report Date: 2018/02/21

Report #: R2518420

Version: 1 - Final

CERTIFICATE OF ANALYSIS

MAXXAM JOB #: B811302

Received: 2018/02/14, 08:25

Sample Matrix: DRINKING WATER
Samples Received: 24

Analyses	Date		Date Analyzed	Laboratory Method	Analytical Method
	Quantity	Extracted			
Elements by CRC ICPMS (total)	19	N/A	2018/02/15	BBY7SOP-00003,	EPA 6020b R2 m
Elements by CRC ICPMS (total)	1	N/A	2018/02/16	BBY7SOP-00003,	EPA 6020b R2 m
Elements by CRC ICPMS (total)	4	N/A	2018/02/17	BBY7SOP-00003,	EPA 6020b R2 m

Remarks:

Maxxam Analytics' laboratories are accredited to ISO/IEC 17025:2005 for specific parameters on scopes of accreditation. Unless otherwise noted, procedures used by Maxxam are based upon recognized Provincial, Federal or US method compendia such as CCME, MDDELCC, EPA, APHA.

All work recorded herein has been done in accordance with procedures and practices ordinarily exercised by professionals in Maxxam's profession using accepted testing methodologies, quality assurance and quality control procedures (except where otherwise agreed by the client and Maxxam in writing). All data is in statistical control and has met quality control and method performance criteria unless otherwise noted. All method blanks are reported; unless indicated otherwise, associated sample data are not blank corrected.

Maxxam Analytics' liability is limited to the actual cost of the requested analyses, unless otherwise agreed in writing. There is no other warranty expressed or implied. Maxxam has been retained to provide analysis of samples provided by the Client using the testing methodology referenced in this report. Interpretation and use of test results are the sole responsibility of the Client and are not within the scope of services provided by Maxxam, unless otherwise agreed in writing.

Solid sample results, except biota, are based on dry weight unless otherwise indicated. Organic analyses are not recovery corrected except for isotope dilution methods.

Results relate to samples tested.

This Certificate shall not be reproduced except in full, without the written approval of the laboratory.

Reference Method suffix "m" indicates test methods incorporate validated modifications from specific reference methods to improve performance.

* RPDs calculated using raw data. The rounding of final results may result in the apparent difference.

Your Project #: ENW.VENW03150-01
Site Location: 2018 DRINKING WATER

Attention: Darren Thomas

TETRA TECH CANADA INC.
#1 - 4376 BOBAN DRIVE
NANAIMO, BC
Canada V9T 6A7

Your C.O.C. #: 541404-04-01, 541404-05-01, 541404-06-01

Report Date: 2018/02/21
Report #: R2518420
Version: 1 - Final

CERTIFICATE OF ANALYSIS

MAXXAM JOB #: B811302
Received: 2018/02/14, 08:25

Encryption Key

Please direct all questions regarding this Certificate of Analysis to your Project Manager.
Letitia Prefontaine, B.Sc., Senior Project Manager
Email: LPrefontaine@maxxam.ca
Phone# (604)639-2616
=====

Maxxam has procedures in place to guard against improper use of the electronic signature and have the required "signatories", as per section 5.10.2 of ISO/IEC 17025:2005(E), signing the reports. For Service Group specific validation please refer to the Validation Signature Page.

Maxxam Job #: B811302
Report Date: 2018/02/21

TETRA TECH CANADA INC.
Client Project #: ENW.VENW03150-01
Site Location: 2018 DRINKING WATER
Sampler Initials: DT

ELEMENTS BY ATOMIC SPECTROSCOPY (DRINKING WATER)

Maxxam ID			SY6838	SY6839	SY6840	SY6841	SY6842	SY6843		
Sampling Date			2018/02/13 07:30	2018/02/13 07:30	2018/02/13 07:30	2018/02/13 07:30	2018/02/05 00:00	2018/02/05 01:00		
COC Number			541404-04-01	541404-04-01	541404-04-01	541404-04-01	541404-04-01	541404-04-01		
	UNITS	MAC	DC20-0S	DC20-30S	DC20-2MIN	DC20-5MIN	SD05-30S	CI01-30S	RDL	QC Batch

Total Metals by ICPMS

Total Lead (Pb)	ug/L	10	469	4.60	4.00	5.80	6.11	3.33	0.20	8911897
-----------------	------	----	-----	------	------	------	------	------	------	---------

No Fill	No Exceedance
Grey	Exceeds 1 criteria policy/level
Black	Exceeds both criteria/levels

RDL = Reportable Detection Limit

Maxxam ID			SY6844	SY6845	SY6846	SY6847	SY6848	SY6849		
Sampling Date			2018/02/05 01:00	2018/02/05 01:00	2018/02/05 01:00	2018/02/05 01:00	2018/02/05 01:00	2018/02/05 01:00		
COC Number			541404-04-01	541404-04-01	541404-04-01	541404-04-01	541404-05-01	541404-05-01		
	UNITS	MAC	CI04-30S	CI07-30S	CI08-30S	CI09-30S	CI10-30S	CI13-30S	RDL	QC Batch

Total Metals by ICPMS

Total Lead (Pb)	ug/L	10	1.05	3.70	6.89	1.75	2.36	6.57	0.20	8911897
-----------------	------	----	------	------	------	------	------	------	------	---------

No Fill	No Exceedance
Grey	Exceeds 1 criteria policy/level
Black	Exceeds both criteria/levels

RDL = Reportable Detection Limit

Maxxam ID			SY6850	SY6851	SY6852	SY6853	SY6854	SY6855		
Sampling Date			2018/02/05 01:00	2018/02/05 01:00	2018/02/05 01:00	2018/02/05 01:00	2018/02/05 03:00	2018/02/05 03:00		
COC Number			541404-05-01	541404-05-01	541404-05-01	541404-05-01	541404-05-01	541404-05-01		
	UNITS	MAC	CI12-30S	CI14-30S	CI15-30S	CIDUP-30S	UP01-30S	UP04-30S	RDL	QC Batch

Total Metals by ICPMS

Total Lead (Pb)	ug/L	10	3.35	5.71	3.57	3.40	3.94	1.08	0.20	8911897
-----------------	------	----	------	------	------	------	------	------	------	---------

No Fill	No Exceedance
Grey	Exceeds 1 criteria policy/level
Black	Exceeds both criteria/levels

RDL = Reportable Detection Limit

Maxxam Job #: B811302
Report Date: 2018/02/21

TETRA TECH CANADA INC.
Client Project #: ENW.VENW03150-01
Site Location: 2018 DRINKING WATER
Sampler Initials: DT

ELEMENTS BY ATOMIC SPECTROSCOPY (DRINKING WATER)

Maxxam ID			SY6856		SY6857	SY6859	SY6860	SY6861			
Sampling Date			2018/02/05 03:00		2018/02/05 03:00	2018/02/05 03:00	2018/02/05 03:00	2018/02/05 03:00			
COC Number			541404-05-01		541404-05-01	541404-06-01	541404-06-01	541404-06-01			
	UNITS	MAC	UP05-30S	QC Batch	UP06-30S	UP09-30S	UP10-30S	UP11-30S	RDL	QC Batch	
Total Metals by ICPMS											
Total Lead (Pb)		ug/L	10	6.26	8911897	1.50	4.36	2.35	3.53	0.20	8911922
No Fill	No Exceedance										
Grey	Exceeds 1 criteria policy/level										
Black	Exceeds both criteria/levels										
RDL = Reportable Detection Limit											

Maxxam Job #: B811302
Report Date: 2018/02/21

TETRA TECH CANADA INC.
Client Project #: ENW.VENW03150-01
Site Location: 2018 DRINKING WATER
Sampler Initials: DT

ELEMENTS BY ATOMIC SPECTROSCOPY (DRINKING WATER)

Maxxam ID			SY6862		
Sampling Date			2018/02/05 03:00		
COC Number			541404-06-01		
	UNITS	MAC	UP13-30S	RDL	QC Batch
Total Metals by ICPMS					
Total Lead (Pb)	ug/L	10	1.09	0.20	8911922
No Fill	No Exceedance				
Grey	Exceeds 1 criteria policy/level				
Black	Exceeds both criteria/levels				
RDL = Reportable Detection Limit					

Maxxam Job #: B811302
Report Date: 2018/02/21

TETRA TECH CANADA INC.
Client Project #: ENW.VENW03150-01
Site Location: 2018 DRINKING WATER
Sampler Initials: DT

GENERAL COMMENTS

Each temperature is the average of up to three cooler temperatures taken at receipt

Package 1	2.7°C
-----------	-------

MAC: The guidelines that have been included in this report have been taken from the Canadian Drinking Water Quality Summary Table, February 2017.

Criteria A = Maximum Acceptable Concentration (MAC) / Criteria B = Aesthetic Objectives (AO) / Criteria C = Operational Guidance Values (OG)
It is recommended to consult these guidelines when interpreting your data since there are non-numerical guidelines that are not included on this report.

Turbidity Guidelines:

1. Chemically assisted filtration: less than or equal to 0.3 NTU in 95% of the measurements or 95% of the time each month. Shall not exceed 1.0 NTU at any time.
2. Slow sand / diatomaceous earth filtration: less than or equal to 1.0 NTU in 95% of the measurements or 95% of the time each month. Shall not exceed 3.0 NTU at any time.
3. Membrane filtration: less than or equal to 0.1 NTU in 99% of the measurements made or at least 99% of the time each calendar month. Shall not exceed 0.3 NTU at any time.

Results relate only to the items tested.

Maxxam Job #: B811302
Report Date: 2018/02/21

QUALITY ASSURANCE REPORT

TETRA TECH CANADA INC.
Client Project #: ENW.VENW03150-01
Site Location: 2018 DRINKING WATER
Sampler Initials: DT

QC Batch	Parameter	Date	Matrix Spike		Spiked Blank		Method Blank		RPD	
			% Recovery	QC Limits	% Recovery	QC Limits	Value	UNITS	Value (%)	QC Limits
8911897	Total Lead (Pb)	2018/02/15	NC	80 - 120	103	80 - 120	<0.20	ug/L	3.0	20
8911922	Total Lead (Pb)	2018/02/16	99	80 - 120	102	80 - 120	<0.20	ug/L		

Duplicate: Paired analysis of a separate portion of the same sample. Used to evaluate the variance in the measurement.

Matrix Spike: A sample to which a known amount of the analyte of interest has been added. Used to evaluate sample matrix interference.

Spiked Blank: A blank matrix sample to which a known amount of the analyte, usually from a second source, has been added. Used to evaluate method accuracy.

Method Blank: A blank matrix containing all reagents used in the analytical procedure. Used to identify laboratory contamination.

NC (Matrix Spike): The recovery in the matrix spike was not calculated. The relative difference between the concentration in the parent sample and the spike amount was too small to permit a reliable recovery calculation (matrix spike concentration was less than the native sample concentration)

Maxxam Job #: B811302
Report Date: 2018/02/21

TETRA TECH CANADA INC.
Client Project #: ENW.VENW03150-01
Site Location: 2018 DRINKING WATER
Sampler Initials: DT

VALIDATION SIGNATURE PAGE

The analytical data and all QC contained in this report were reviewed and validated by the following individual(s).



Rob Reinert, B.Sc., Scientific Spécialist

Maxxam has procedures in place to guard against improper use of the electronic signature and have the required "signatories", as per section 5.10.2 of ISO/IEC 17025:2005(E), signing the reports. For Service Group specific validation please refer to the Validation Signature Page.



B811302_COC

Page (of 2)

INVOICE TO:		Report Information		Project Information	
Company Name	#1433 TETRA TECH CANADA INC.	Company Name	Shawneen Walker	Quotation #	B71611
Contact Name	Shawneen Walker	Contact Name	Shawneen Walker	P.O. #	
Address	#1 - 4376 BOBAN DRIVE NANAIMO BC V9T 6A7	Address		Project #	ENW.VENW03148-01
Phone	(250) 756-2256 x	Phone		Project Name	SACB drinking water
Email	smwalker@eba.ca; EBA Labdata@tetratech.com	Email	smwalker@eba.ca; EBA Labdata@tetratech.com	Site #	
				Sampled By	Darren Thomas

Bottle Order #:

541404

Chain Of Custody Record

Project Manager

Leticia Prefontaine

Regulatory Criteria:	Special Instructions	ANALYSIS REQUESTED (PLEASE BE SPECIFIC)	Turnaround Time (TAT) Required:
☐ CSR ☐ CCME ☐ BC Water Quality ☒ Other Health Canada			Please provide advance notice for rush projects Regular (Standard) TAT: (will be applied if Rush TAT is not specified): Standard TAT = 5-7 Working days for most tests. Please note: Standard TAT for certain tests such as BOD and Dioxins/Furans are > 5 days - contact your Project Manager for details.

SAMPLES MUST BE KEPT COOL (< 10°C) FROM TIME OF SAMPLING UNTIL DELIVERY TO MAXXAM									
Sample Barcode Label	Sample (Location) Identification	Date Sampled	Time Sampled	Matrix	Metals Field Filtered (Y/N)	Lead - Drinking Water			
1	DL20-0s	7:30	18/02/13	water	N	X			
2	DL20-30s				N	X			
3	DL20-2min				N	X			
4	DL20-5min				N	X			
5	SD05-30sec	11:00	18/02/08		N	X			
6	CI01-30s	1:00			N	X			
7	CI04-30s				N	X			
8	CI07-30s				N	X			
9	CI08-30s				N	X			
10	CI09-30s				N	X			

RELINQUISHED BY: (Signature/Print)	Date: (YY/MM/DD)	Time	RECEIVED BY: (Signature/Print)	Date: (YY/MM/DD)	Time	# jars used and not submitted	Lab Use Only
Darren Thomas	18/02/13	9:00	MUL PEDRO TACK	20/08/2014	08:25		Time Sensitive ☐ Temperature (°C) on Receipt: 2, 3, 3 Custody Seal Intact on Cooler? ☐ Yes ☒ No N/A

* UNLESS OTHERWISE AGREED TO IN WRITING, WORK SUBMITTED ON THIS CHAIN OF CUSTODY IS SUBJECT TO MAXXAM'S STANDARD TERMS AND CONDITIONS. SIGNING OF THIS CHAIN OF CUSTODY DOCUMENT IS ACKNOWLEDGMENT AND ACCEPTANCE OF OUR TERMS WHICH ARE AVAILABLE FOR VIEWING AT WWW.MAXXAM.CA/TERMS.

* IT IS THE RESPONSIBILITY OF THE RELINQUISHER TO ENSURE THE ACCURACY OF THE CHAIN OF CUSTODY RECORD. AN INCOMPLETE CHAIN OF CUSTODY MAY RESULT IN ANALYTICAL TAT DELAYS.

INVOICE TO: Company Name: #1433 TETRA TECH CANADA INC. Contact Name: <u>Shawneen Walker</u> Address: #1 - 4376 BOBAN DRIVE NANAIMO BC V9T 6A7 Phone: (250) 756-2256 x Email: <u>smwalker@tetra.ca</u> , <u>EBA.Labdata@tetratech.com</u>		Report Information Company Name: <u>Shawneen Walker</u> Contact Name: <u>Shawneen Walker</u> Address: <u>Shawneen Walker</u> Phone: <u>Shawneen Walker</u> Email: <u>smwalker@tetra.ca</u> , <u>EBA.Labdata@tetratech.com</u>		Project Information Quotation #: B71611 P.O. #: <u>5-01</u> Project #: <u>ENW.VENW03140-01</u> Project Name: <u>OKS & Tetras</u> Site #: <u>Darren Pines</u> Sampled By: <u>Darren Pines</u>		Labels B811302_COC Bottle Order #: <u>541404</u> Chain Of Custody Record Project Manager: <u>Letitia Prefontaine</u> C#541404-05-01											
Regulatory Criteria: ☐ CSR ☐ CCME ☐ BC Water Quality ☒ Other: <u>Health Canada</u>		Special Instructions		ANALYSIS REQUESTED (PLEASE BE SPECIFIC)		Turnaround Time (TAT) Required: Please provide advance notice for rush projects Regular (Standard) TAT: (will be applied if Rush TAT is not specified): Standard TAT = 5-7 Working days for most tests. Please note: Standard TAT for certain tests such as BOD and Dioxins/Furans are > 5 days - contact your Project Manager for details. Job Specific Rush TAT (if applies to entire submission) 1 DAY ☐ 2 Day ☐ 3 Day ☐ Date Required: ☐ Rush Confirmation Number: _____ (call lab for #)											
SAMPLES MUST BE KEPT COOL (< 10°C) FROM TIME OF SAMPLING UNTIL DELIVERY TO MAXXAM				Metals Field Filtered? (Y/N) Lead - Drinking Water													
1	CIW-30s	18/02/05	01:00			water	✓	X									
2	CI13-30s						✓	X									
3	CI12-30s						✓	X									
4	CI14-30s						✓	X									
5	CI15-30s						✓	X									
6	CI Dup-30s						✓	X									
7	UP01-30s		03:00				✓	X									
8	UP04-30s						✓	X									
9	UP05-30s						✓	X									
10	UP06-30s				✓	X											
* RELINQUISHED BY: (Signature/Print) <u>Darren Pines</u>		Date: (YY/MM/DD) <u>18/02/05</u>		Time: <u>9:00</u>		RECEIVED BY: (Signature/Print) <u>MIL PEDRO TACK</u>		Date: (YY/MM/DD) <u>2018/02/14</u>		Time: <u>08:25</u>		# Jars used and not submitted: <u>2</u>		Lab Use Only Time Sensitive: ☐ Temperature (°C) on Receipt: <u>23.3</u>		Custody Seal Intact on Cooler? ☐ Yes ☐ No <u>N/A</u>	
* UNLESS OTHERWISE AGREED TO IN WRITING, WORK SUBMITTED ON THIS CHAIN OF CUSTODY IS SUBJECT TO MAXXAM'S STANDARD TERMS AND CONDITIONS. SIGNING OF THIS CHAIN OF CUSTODY DOCUMENT IS ACKNOWLEDGMENT AND ACCEPTANCE OF OUR TERMS WHICH ARE AVAILABLE FOR VIEWING AT WWW.MAXXAM.CA/TERMS.														White Maxxam Yellow Client			



Maxxam Analytics International Corporation o/a Maxxam Analytics
4606 Canada Way, Burnaby, British Columbia Canada V5G 1K5 Tel: (604) 734 7276 Toll-free: 800-563-6266 Fax: (604) 731 2386 www.maxxam.ca

INVOICE TO:
Company Name #1433 TETRA TECH CANADA INC
Contact Name Shaheen Walker
Address #1 - 4376 BOBAN DRIVE
NANAIMO BC V9T 6A7
Phone (250) 756-2256 x Fax (250) 756-2686 x
Email smwalker@tetrac.ca; EBA.Labdata@tetrattech.com

Report Information
Company Name Shaheen Walker
Contact Name Shaheen Walker
Address Shaheen Walker
Phone Shaheen Walker
Email smwalker@tetrac.ca; EBA.Labdata@tetrattech.com

Project Information
Quotation # B71611
P.O. #
Project # ENW.VENW03140-01
Project Name SRS de tetras
Site #
Sampled By Shaheen Walker



B811302_COC

Page 3 of 3
Only
Bottle Order #:
541404
Chain Of Custody Record
Project Manager
Letitia Prefontaine

Regulatory Criteria:
☐ CSR
☐ CCME
☐ BC Water Quality
☒ Other Health Canada

Special Instructions

ANALYSIS REQUESTED (PLEASE BE SPECIFIC)

Turnaround Time (TAT) Required:

Please provide advance notice for rush projects
Regular (Standard) TAT:
(will be applied if Rush TAT is not specified):
Standard TAT = 5-7 Working days for most tests.
Please note: Standard TAT for certain tests such as BOD and Dioxins/Furans are > 5 days - contact your Project Manager for details.

Job Specific Rush TAT (if applies to entire submission)
1 DAY ☐ 2 Day ☐ 3 Day ☐ Date Required: ☐
Rush Confirmation Number: ☐

(call lab for #)

SAMPLES MUST BE KEPT COOL (< 10°C) FROM TIME OF SAMPLING UNTIL DELIVERY TO MAXXAM

Sample Barcode Label	Sample (Location) Identification	Date Sampled	Time Sampled	Matrix	Metals Field Filtered? (Y/N)	Lead - Drinking Water	Analysis Requested	# of Bottles	Comments
1	UP09-30s	18/02/17	08:00	Water	X			1	
2	UP10-30s	↓	↓	↓	X			1	
3	UP11-30s	↓	↓	↓	X			1	
4	UP13-30s	↓	↓	↓	X			1	
5									
6									
7									
8									
9									
10									

* RELINQUISHED BY: (Signature/Print) Shaheen Walker Date: (YY/MM/DD) 18/02/17 Time 08:00 RECEIVED BY: (Signature/Print) LUIS PEDRO THOMAS Date: (YY/MM/DD) 20/02/17 Time 08:35 # jars used and not submitted ☐ Lab Use Only
Time Sensitive ☐ Temperature (°C) on Receipt 23.3 Custody Seal Intact on Cooler? ☐ Yes ☒ No N/A

* UNLESS OTHERWISE AGREED TO IN WRITING, WORK SUBMITTED ON THIS CHAIN OF CUSTODY IS SUBJECT TO MAXXAM'S STANDARD TERMS AND CONDITIONS. SIGNING OF THIS CHAIN OF CUSTODY DOCUMENT IS ACKNOWLEDGMENT AND ACCEPTANCE OF OUR TERMS WHICH ARE AVAILABLE FOR VIEWING AT WWW.MAXXAM.CA/TERMS.
* IT IS THE RESPONSIBILITY OF THE RELINQUISHER TO ENSURE THE ACCURACY OF THE CHAIN OF CUSTODY RECORD. AN INCOMPLETE CHAIN OF CUSTODY MAY RESULT IN ANALYTICAL TAT DELAYS.

Maxxam Analytics International Corporation o/a Maxxam Analytics

Your Project #: ENW.VENW03150-01
Site Location: SD68 DW TESTING

Attention: Darren Thomas

TETRA TECH CANADA INC.
#1 - 4376 BOBAN DRIVE
NANAIMO, BC
Canada V9T 6A7

Your C.O.C. #: 546212-01-01, 546212-02-01, 546212-03-01, 546212-04-01

Report Date: 2018/02/09
Report #: R2512170
Version: 1 - Final

CERTIFICATE OF ANALYSIS

MAXXAM JOB #: B809186

Received: 2018/02/06, 09:00

Sample Matrix: DRINKING WATER
Samples Received: 34

Analyses	Quantity	Date Extracted	Date Analyzed	Laboratory Method	Analytical Method
Elements by CRC ICPMS (total)	34	N/A	2018/02/07	BBY7SOP-00003,	EPA 6020b R2 m

Remarks:

Maxxam Analytics' laboratories are accredited to ISO/IEC 17025:2005 for specific parameters on scopes of accreditation. Unless otherwise noted, procedures used by Maxxam are based upon recognized Provincial, Federal or US method compendia such as CCME, MDDELCC, EPA, APHA.

All work recorded herein has been done in accordance with procedures and practices ordinarily exercised by professionals in Maxxam's profession using accepted testing methodologies, quality assurance and quality control procedures (except where otherwise agreed by the client and Maxxam in writing). All data is in statistical control and has met quality control and method performance criteria unless otherwise noted. All method blanks are reported; unless indicated otherwise, associated sample data are not blank corrected.

Maxxam Analytics' liability is limited to the actual cost of the requested analyses, unless otherwise agreed in writing. There is no other warranty expressed or implied. Maxxam has been retained to provide analysis of samples provided by the Client using the testing methodology referenced in this report. Interpretation and use of test results are the sole responsibility of the Client and are not within the scope of services provided by Maxxam, unless otherwise agreed in writing.

Solid sample results, except biota, are based on dry weight unless otherwise indicated. Organic analyses are not recovery corrected except for isotope dilution methods.

Results relate to samples tested.

This Certificate shall not be reproduced except in full, without the written approval of the laboratory.

Reference Method suffix "m" indicates test methods incorporate validated modifications from specific reference methods to improve performance.

* RPDs calculated using raw data. The rounding of final results may result in the apparent difference.

Your Project #: ENW.VENW03150-01
Site Location: SD68 DW TESTING

Attention: Darren Thomas

TETRA TECH CANADA INC.
#1 - 4376 BOBAN DRIVE
NANAIMO, BC
Canada V9T 6A7

Your C.O.C. #: 546212-01-01, 546212-02-01, 546212-03-01, 546212-04-01

Report Date: 2018/02/09
Report #: R2512170
Version: 1 - Final

CERTIFICATE OF ANALYSIS

MAXXAM JOB #: B809186
Received: 2018/02/06, 09:00

Encryption Key

Please direct all questions regarding this Certificate of Analysis to your Project Manager.
Letitia Prefontaine, B.Sc., Senior Project Manager
Email: LPrefontaine@maxxam.ca
Phone# (604)639-2616
=====

Maxxam has procedures in place to guard against improper use of the electronic signature and have the required "signatories", as per section 5.10.2 of ISO/IEC 17025:2005(E), signing the reports. For Service Group specific validation please refer to the Validation Signature Page.

Maxxam Job #: B809186
Report Date: 2018/02/09

TETRA TECH CANADA INC.
Client Project #: ENW.VENW03150-01
Site Location: SD68 DW TESTING
Sampler Initials: DT

ELEMENTS BY ATOMIC SPECTROSCOPY (DRINKING WATER)

Maxxam ID			SX6860	SX6861	SX6862	SX6863	SX6864	SX6865		
Sampling Date			2018/02/05 00:00	2018/02/05 00:00	2018/02/05 01:00	2018/02/05 01:00	2018/02/05 01:00	2018/02/05 01:00		
COC Number			546212-01-01	546212-01-01	546212-01-01	546212-01-01	546212-01-01	546212-01-01		
	UNITS	MAC	SD05-OS	SD06-OS	CI01-OS	CI02-OS	CI03-OS	CI04-OS	RDL	QC Batch

Total Metals by ICPMS

Total Lead (Pb)	ug/L	10	12.0	3.94	21.6	1.22	7.22	18.6	0.20	8905065
-----------------	------	----	------	------	------	------	------	------	------	---------

No Fill	No Exceedance
Grey	Exceeds 1 criteria policy/level
Black	Exceeds both criteria/levels

RDL = Reportable Detection Limit

Maxxam ID			SX6866	SX6867	SX6868	SX6869	SX6870	SX6871		
Sampling Date			2018/02/05 01:00	2018/02/05 01:00	2018/02/05 01:00	2018/02/05 01:00	2018/02/05 01:00	2018/02/05 01:00		
COC Number			546212-01-01	546212-01-01	546212-01-01	546212-01-01	546212-02-01	546212-02-01		
	UNITS	MAC	CI05-OS	CI06-OS	CI07-OS	CI08-OS	CI09-OS	CI10-OS	RDL	QC Batch

Total Metals by ICPMS

Total Lead (Pb)	ug/L	10	1.57	7.54	25.1	44.5	22.2	39.9	0.20	8905065
-----------------	------	----	------	------	------	------	------	------	------	---------

No Fill	No Exceedance
Grey	Exceeds 1 criteria policy/level
Black	Exceeds both criteria/levels

RDL = Reportable Detection Limit

Maxxam ID			SX6872	SX6873	SX6874	SX6875	SX6876	SX6877		
Sampling Date			2018/02/05 01:00	2018/02/05 01:00	2018/02/05 01:00	2018/02/05 01:00	2018/02/05 01:00	2018/02/05 01:00		
COC Number			546212-02-01	546212-02-01	546212-02-01	546212-02-01	546212-02-01	546212-02-01		
	UNITS	MAC	CI11-OS	CI12-OS	CI13-OS	CI14-OS	CI15-OS	CIDUP-OS	RDL	QC Batch

Total Metals by ICPMS

Total Lead (Pb)	ug/L	10	3.86	9.86	12.4	33.8	77.7	60.1	0.20	8905065
-----------------	------	----	------	------	------	------	------	------	------	---------

No Fill	No Exceedance
Grey	Exceeds 1 criteria policy/level
Black	Exceeds both criteria/levels

RDL = Reportable Detection Limit

Maxxam Job #: B809186
Report Date: 2018/02/09

TETRA TECH CANADA INC.
Client Project #: ENW.VENW03150-01
Site Location: SD68 DW TESTING
Sampler Initials: DT

ELEMENTS BY ATOMIC SPECTROSCOPY (DRINKING WATER)

Maxxam ID			SX6878		SX6879	SX6881	SX6882	SX6883		
Sampling Date			2018/02/05 03:00		2018/02/05 03:00	2018/02/05 03:00	2018/02/05 03:00	2018/02/05 03:00		
COC Number			546212-02-01		546212-02-01	546212-03-01	546212-03-01	546212-03-01		
	UNITS	MAC	UP01-OS	QC Batch	UP02-OS	UP03-OS	UP04-OS	UP05-OS	RDL	QC Batch
Total Metals by ICPMS										
Total Lead (Pb)	ug/L	10	20.9	8905065	5.94	4.04	10.6	20.2	0.20	8905067
No Fill	No Exceedance									
Grey	Exceeds 1 criteria policy/level									
Black	Exceeds both criteria/levels									
RDL = Reportable Detection Limit										

Maxxam Job #: B809186
Report Date: 2018/02/09

TETRA TECH CANADA INC.
Client Project #: ENW.VENW03150-01
Site Location: SD68 DW TESTING
Sampler Initials: DT

ELEMENTS BY ATOMIC SPECTROSCOPY (DRINKING WATER)

Maxxam ID			SX6884	SX6885	SX6886	SX6887	SX6888	SX6889		
Sampling Date			2018/02/05 03:00	2018/02/05 03:00	2018/02/05 03:00	2018/02/05 03:00	2018/02/05 03:00	2018/02/05 03:00		
COC Number			546212-03-01	546212-03-01	546212-03-01	546212-03-01	546212-03-01	546212-03-01		
	UNITS	MAC	UP06-OS	UP07-OS	UP08-OS	UP09-OS	UP10-OS	UP11-OS	RDL	QC Batch

Total Metals by ICPMS

Total Lead (Pb)	ug/L	10	12.3	8.20	2.50	50.7	26.3	22.6	0.20	8905067
-----------------	------	----	-------------	------	------	-------------	-------------	-------------	------	---------

No Fill	No Exceedance
Grey	Exceeds 1 criteria policy/level
Black	Exceeds both criteria/levels

RDL = Reportable Detection Limit

Maxxam ID			SX6890	SX6898	SX6899	SX6900	SX6901		
Sampling Date			2018/02/05 03:00	2018/02/05 03:00	2018/02/05 03:00	2018/02/05 03:00	2018/02/05 03:00		
COC Number			546212-03-01	546212-04-01	546212-04-01	546212-04-01	546212-04-01		
	UNITS	MAC	UP12-OS	UP13-OS	UP14-OS	UP15-OS	UPDUP-OS	RDL	QC Batch

Total Metals by ICPMS

Total Lead (Pb)	ug/L	10	2.14	12.8	1.04	2.42	2.11	0.20	8905067
-----------------	------	----	------	-------------	------	------	------	------	---------

No Fill	No Exceedance
Grey	Exceeds 1 criteria policy/level
Black	Exceeds both criteria/levels

RDL = Reportable Detection Limit

Maxxam Job #: B809186
Report Date: 2018/02/09

TETRA TECH CANADA INC.
Client Project #: ENW.VENW03150-01
Site Location: SD68 DW TESTING
Sampler Initials: DT

GENERAL COMMENTS

Each temperature is the average of up to three cooler temperatures taken at receipt

Package 1	1.0°C
-----------	-------

MAC: The guidelines that have been included in this report have been taken from the Canadian Drinking Water Quality Summary Table, February 2017.

Criteria A = Maximum Acceptable Concentration (MAC) / Criteria B = Aesthetic Objectives (AO) / Criteria C = Operational Guidance Values (OG)
It is recommended to consult these guidelines when interpreting your data since there are non-numerical guidelines that are not included on this report.

Turbidity Guidelines:

1. Chemically assisted filtration: less than or equal to 0.3 NTU in 95% of the measurements or 95% of the time each month. Shall not exceed 1.0 NTU at any time.
2. Slow sand / diatomaceous earth filtration: less than or equal to 1.0 NTU in 95% of the measurements or 95% of the time each month. Shall not exceed 3.0 NTU at any time.
3. Membrane filtration: less than or equal to 0.1 NTU in 99% of the measurements made or at least 99% of the time each calendar month. Shall not exceed 0.3 NTU at any time.

Results relate only to the items tested.

Maxxam Job #: B809186
Report Date: 2018/02/09

QUALITY ASSURANCE REPORT

TETRA TECH CANADA INC.
Client Project #: ENW.VENW03150-01
Site Location: SD68 DW TESTING
Sampler Initials: DT

QC Batch	Parameter	Date	Matrix Spike		Spiked Blank		Method Blank		RPD	
			% Recovery	QC Limits	% Recovery	QC Limits	Value	UNITS	Value (%)	QC Limits
8905065	Total Lead (Pb)	2018/02/07	100	80 - 120	94	80 - 120	<0.20	ug/L	9.9	20
8905067	Total Lead (Pb)	2018/02/07	99	80 - 120	99	80 - 120	<0.20	ug/L	0.86	20

Duplicate: Paired analysis of a separate portion of the same sample. Used to evaluate the variance in the measurement.

Matrix Spike: A sample to which a known amount of the analyte of interest has been added. Used to evaluate sample matrix interference.

Spiked Blank: A blank matrix sample to which a known amount of the analyte, usually from a second source, has been added. Used to evaluate method accuracy.


Method Blank: A blank matrix containing all reagents used in the analytical procedure. Used to identify laboratory contamination.

Maxxam Job #: B809186
Report Date: 2018/02/09

TETRA TECH CANADA INC.
Client Project #: ENW.VENW03150-01
Site Location: SD68 DW TESTING
Sampler Initials: DT

VALIDATION SIGNATURE PAGE

The analytical data and all QC contained in this report were reviewed and validated by the following individual(s).



Andy Lu, Ph.D., P.Chem., Scientific Specialist

Maxxam has procedures in place to guard against improper use of the electronic signature and have the required "signatories", as per section 5.10.2 of ISO/IEC 17025:2005(E), signing the reports. For Service Group specific validation please refer to the Validation Signature Page.

Maxxam A Bureau Veritas Group Company										Maxxam Analytics International Corporation c/o Maxxam Analytics 4606 Canada Way, Burnaby, British Columbia Canada V5G 1K5 Tel: (604) 734 7276 Toll-free: 800-563-6286 Fax: (604) 731 2386 www.maxxam.ca										Page 1 of 4																																																																																																																																																																																																																																																											
INVOICE TO: Company Name: #1433 TETRA TECH CANADA INC. Contact Name: Darren Thomas Address: #1 - 4376 BOBAN DRIVE NANAIMO BC V9T 6A7 Phone: (250) 756-2256 x Fax: (250) 756-2686 x Email: Darren.Thomas@tetratech.com; EBA.Labdata@tetratec										Report Information Company Name: Darren Thomas Contact Name: Darren Thomas Address: Phone: Fax: Email: Darren.Thomas@tetratech.com; EBA.Labdata@tetratec										Project Information Quotation #: B71611 P.O. #: Project #: ENW VENW03150-01 Project Name: S068 on test:as Site #: Sampled By: Darren Thomas										 B809186_COC  C#546212-01-01 Letitia Prefontaine Manager																																																																																																																																																																																																																																																	
Regulatory Criteria: ☐ CSR ☐ CCME ☐ BC Water Quality ☒ Other: Health Canada										Special Instructions: Preservative leaky labels Combed. Check bottle cap when unclear.										ANALYSIS REQUESTED (PLEASE BE SPECIFIC) <table border="1" style="width:100%; border-collapse: collapse;"> <tr> <td style="width:5%;">Metals Field Filtered ? (Y/N)</td> <td style="width:5%;">Lead - Drinking Water</td> <td style="width:5%;"></td><td style="width:5%;"></td><td style="width:5%;"></td><td style="width:5%;"></td><td style="width:5%;"></td><td style="width:5%;"></td><td style="width:5%;"></td><td style="width:5%;"></td><td style="width:5%;"></td><td style="width:5%;"></td><td style="width:5%;"></td><td style="width:5%;"></td><td style="width:5%;"></td><td style="width:5%;"></td><td style="width:5%;"></td><td style="width:5%;"></td><td style="width:5%;"></td><td style="width:5%;"></td> </tr> </table>										Metals Field Filtered ? (Y/N)	Lead - Drinking Water																			Turnaround Time (TAT) Required: Please provide advance notice for rush projects Regular (Standard) TAT: (will be applied if Rush TAT is not specified): Standard TAT = 5-7 Working days for most tests. Please note: Standard TAT for certain tests such as BOD and Dioxins/Furans are > 5 days - contact your Project Manager for details. Job Specific Rush TAT (if applies to entire submission): 1 DAY ☐ 2 Day ☐ 3 Day ☐ Date Required: ☐ Rush Confirmation Number: (call lab for #)																																																																																																																																																																																																																													
Metals Field Filtered ? (Y/N)	Lead - Drinking Water																																																																																																																																																																																																																																																																														
SAMPLES MUST BE KEPT COOL (< 10°C) FROM TIME OF SAMPLING UNTIL DELIVERY TO MAXXAM										<table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Sample Barcode Label</th> <th>Sample (Location) Identification</th> <th>Date Sampled</th> <th>Time Sampled</th> <th>Matrix</th> <th>Metals Field Filtered ? (Y/N)</th> <th>Lead - Drinking Water</th> <th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th> </tr> </thead> <tbody> <tr> <td>1</td> <td>SD05 - 03</td> <td>18/02/05</td> <td>12:00 (midnight)</td> <td>water</td> <td>N</td> <td>X</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>2</td> <td>SD06 - 03</td> <td></td> <td>"</td> <td>"</td> <td>N</td> <td>X</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>3</td> <td>CI01 - 03</td> <td></td> <td>1:00 am</td> <td></td> <td>N</td> <td>X</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>4</td> <td>CI02 - 03</td> <td></td> <td></td> <td></td> <td>N</td> <td>X</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>5</td> <td>CI03 - 03</td> <td></td> <td></td> <td></td> <td>N</td> <td>X</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>6</td> <td>CI04 - 03</td> <td></td> <td></td> <td></td> <td>N</td> <td>X</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>7</td> <td>CI05 - 03</td> <td></td> <td></td> <td></td> <td>N</td> <td>X</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>8</td> <td>CI06 - 03</td> <td></td> <td></td> <td></td> <td>N</td> <td>X</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>9</td> <td>CI07 - 03</td> <td></td> <td></td> <td></td> <td>N</td> <td>X</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>10</td> <td>CI08 - 03</td> <td></td> <td></td> <td></td> <td>N</td> <td>X</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>										Sample Barcode Label	Sample (Location) Identification	Date Sampled	Time Sampled	Matrix	Metals Field Filtered ? (Y/N)	Lead - Drinking Water														1	SD05 - 03	18/02/05	12:00 (midnight)	water	N	X														2	SD06 - 03		"	"	N	X														3	CI01 - 03		1:00 am		N	X														4	CI02 - 03				N	X														5	CI03 - 03				N	X														6	CI04 - 03				N	X														7	CI05 - 03				N	X														8	CI06 - 03				N	X														9	CI07 - 03				N	X														10	CI08 - 03				N	X														<table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th># of Bottles</th> <th>Comments</th> </tr> </thead> <tbody> <tr><td>1</td><td></td></tr> <tr><td>1</td><td></td></tr> <tr><td>1</td><td></td></tr> <tr><td>1</td><td></td></tr> <tr><td>1</td><td></td></tr> <tr><td>1</td><td></td></tr> <tr><td>1</td><td></td></tr> <tr><td>1</td><td></td></tr> <tr><td>1</td><td></td></tr> <tr><td>1</td><td></td></tr> </tbody> </table>										# of Bottles	Comments	1		1		1		1		1		1		1		1		1		1	
Sample Barcode Label	Sample (Location) Identification	Date Sampled	Time Sampled	Matrix	Metals Field Filtered ? (Y/N)	Lead - Drinking Water																																																																																																																																																																																																																																																																									
1	SD05 - 03	18/02/05	12:00 (midnight)	water	N	X																																																																																																																																																																																																																																																																									
2	SD06 - 03		"	"	N	X																																																																																																																																																																																																																																																																									
3	CI01 - 03		1:00 am		N	X																																																																																																																																																																																																																																																																									
4	CI02 - 03				N	X																																																																																																																																																																																																																																																																									
5	CI03 - 03				N	X																																																																																																																																																																																																																																																																									
6	CI04 - 03				N	X																																																																																																																																																																																																																																																																									
7	CI05 - 03				N	X																																																																																																																																																																																																																																																																									
8	CI06 - 03				N	X																																																																																																																																																																																																																																																																									
9	CI07 - 03				N	X																																																																																																																																																																																																																																																																									
10	CI08 - 03				N	X																																																																																																																																																																																																																																																																									
# of Bottles	Comments																																																																																																																																																																																																																																																																														
1																																																																																																																																																																																																																																																																															
1																																																																																																																																																																																																																																																																															
1																																																																																																																																																																																																																																																																															
1																																																																																																																																																																																																																																																																															
1																																																																																																																																																																																																																																																																															
1																																																																																																																																																																																																																																																																															
1																																																																																																																																																																																																																																																																															
1																																																																																																																																																																																																																																																																															
1																																																																																																																																																																																																																																																																															
1																																																																																																																																																																																																																																																																															
RELINQUISHED BY: (Signature/Print) <i>Darren Thomas</i>										Date: (YY/MM/DD) 18/02/05										Time: 7:00										RECEIVED BY: (Signature/Print) <i>S. Simon et al</i>										Date: (YY/MM/DD) 18/02/06										Time: 9:00										# jars used and not submitted										Lab Use Only Time Sensitive ☐ Temperature (°C) on Receipt: 20.0 Custody Seal Intact on Cooler? ☐ Yes ☒ No																																																																																																																																																																																																									
* UNLESS OTHERWISE AGREED TO IN WRITING, WORK SUBMITTED ON THIS CHAIN OF CUSTODY IS SUBJECT TO MAXXAM'S STANDARD TERMS AND CONDITIONS. SIGNING OF THIS CHAIN OF CUSTODY DOCUMENT IS ACKNOWLEDGMENT AND ACCEPTANCE OF OUR TERMS WHICH ARE AVAILABLE FOR VIEWING AT WWW.MAXXAM.CA/TERMS.										IT IS THE RESPONSIBILITY OF THE RELINQUISHER TO ENSURE THE ACCURACY OF THE CHAIN OF CUSTODY RECORD. AN INCOMPLETE CHAIN OF CUSTODY MAY RESULT IN ANALYTICAL TAT DELAYS.										White: Maxxam Yellow: Client																																																																																																																																																																																																																																																											

INVOICE TO: Company Name: #1433 TETRA TECH CANADA INC. Contact Name: Darren Thomas Address: #1 - 4376 BOBAN DRIVE NANAIMO BC V9T 6A7 Phone: (250) 756-2256 x Fax: (250) 756-2686 x Email: Darren.Thomas@tetratech.com; EBA.Labdata@tetratec		Report Information Company Name: Darren Thomas Contact Name: Darren Thomas Address: _____ Phone: _____ Fax: _____ Email: Darren.Thomas@tetratech.com; EBA.Labdata@tetratec		Project Information Quotation #: B71611 P.O. #: _____ Project #: ENW VENW03150-01 Project Name: SDCS Dr testrig Site #: _____ Sampled By: Darren Thomas		 B809186_COC  C8546212-02-01 Order #: _____ Manager: _____ Lab Use Only: _____											
Regulatory Criteria: ☐ CSR ☐ CCME ☐ BC Water Quality ☒ Other: Health Care		Special Instructions 		ANALYSIS REQUESTED (PLEASE BE SPECIFIC) 		Turnaround Time (TAT) Required: Please provide advance notice for rush projects Regular (Standard) TAT: (will be applied if Rush TAT is not specified): Standard TAT = 5-7 Working days for most tests. Please note: Standard TAT for certain tests such as BOD and Dioxins/Furans are > 5 days - contact your Project Manager for details. Job Specific Rush TAT (if applies to entire submission) 1 DAY ☐ 2 Day ☐ 3 Day ☐ Date Required: _____ Rush Confirmation Number: _____ (call lab for #) # of Bottles: _____ Comments: _____											
SAMPLES MUST BE KEPT COOL (< 10°C) FROM TIME OF SAMPLING UNTIL DELIVERY TO MAXXAM																	
	Sample Barcode Label	Sample (Location) Identification	Date Sampled	Time Sampled	Matrix	Metals Field Filtered? (Y/N)	Lead - Drinking Water										
1		CI 01 - OS	18/02/05	1:00pm	water	N	X										1
2		CI 10 - OS				N	X										1
3		CI 11 - OS				N	X										1
4		CI 12 - OS				N	X										1
5		CI 13 - OS				N	X										1
6		CI 14 - OS				N	X										1
7		CI 15 - OS				N	X										1
8		CI DUP - OS				N	X										1
9		UP 01 - OS		3:00pm		N	X										1
10		UP 02 - OS				N	X										1
RELINQUISHED BY: (Signature/Print) <i>Darren Thomas</i>		Date: (YY/MM/DD) 18/02/05	Time: 7:00	RECEIVED BY: (Signature/Print) <i>Simon</i>		Date: (YY/MM/DD) 18/02/05	Time: 2:00	# Jars used and not submitted	Lab Use Only Time Sensitive ☐ Temperature (°C) on Receipt: 2.0/1		Custody Seal Intact on Cooler? ☐ Yes ☐ No <i>NA</i>						
* UNLESS OTHERWISE AGREED TO IN WRITING, WORK SUBMITTED ON THIS CHAIN OF CUSTODY IS SUBJECT TO MAXXAM'S STANDARD TERMS AND CONDITIONS. SIGNING OF THIS CHAIN OF CUSTODY DOCUMENT IS ACKNOWLEDGMENT AND ACCEPTANCE OF OUR TERMS WHICH ARE AVAILABLE FOR VIEWING AT WWW.MAXXAM.CA/TERMS.													White: Maxxam Yellow: Client				

Maxxam
A Bureaus and Laboratories Company

Maxxam Analytics International Corporation o/a Maxxam Analytics
4606 Canada Way, Burnaby, British Columbia Canada V5G 1K5 Tel: (604) 734 7276 Toll-free 800-563-6266 Fax: (604) 731 2386 www.maxxam.ca

INVOICE TO:
Company Name: #1433 TETRA TECH CANADA INC.
Contact Name: Darren Thomas
Address: #1 - 4376 BOBAN DRIVE
NANAIMO BC V9T 6A7
Phone: (250) 756-2256 x Fax: (250) 756-2686 x
Email: Darren.Thomas@tetratech.com; EBA.Labdata@tetratec

Report Information
Company Name: Darren Thomas
Contact Name: Darren Thomas
Address: Darren.Thomas@tetratech.com; EBA.Labdata@tetratec
Phone: Fax:

Project Information
Quotation #: B71611
P.O. #: ENW.VENW03150-01
Project #: SD65 DW tetras
Project Name: SD65 DW tetras
Site #: Darren Thomas
Sampled By: Darren Thomas

Regulatory Criteria:
☐ CSR
☐ CCME
☐ BC Water Quality
☒ Other Health Canada

Special Instructions

ANALYSIS REQUESTED (PLEASE BE SPECIFIC)

Turnaround Time (TAT) Required:
Please provide advance notice for rush projects.
Regular (Standard) TAT:
(will be applied if Rush TAT is not specified):
Standard TAT = 5-7 Working days for most tests.
Please note: Standard TAT for certain tests such as BOD and Dioxins/Furans are > 5 days - contact your Project Manager for details.
Job Specific Rush TAT (if applies to entire submission)
1 DAY ☐ 2 Day ☐ 3 Day ☐ Date Required: ☐
Rush Confirmation Number: (call lab for #)

SAMPLES MUST BE KEPT COOL (< 10°C) FROM TIME OF SAMPLING UNTIL DELIVERY TO MAXXAM

Sample Barcode Label	Sample (Location) Identification	Date Sampled	Time Sampled	Matrix	Metals Field Filtered? (Y/N)	Lead - Drinking Water	# of Bottles	Comments
1	UP03 - OS	18/02/05	3:00pm	water	N	X	1	
2	UP04 - OS				N	X	1	
3	UP05 - OS				N	X	1	
4	UP06 - OS				N	X	1	
5	UP07 - OS				N	X	1	
6	UP08 - OS				N	X	1	
7	UP09 - OS				N	X	1	
8	UP10 - OS				N	X	1	
9	UP11 - OS				N	X	1	
10	UP12 - OS				N	X	1	

RELINQUISHED BY: (Signature/Print) *Darren Thomas* **Date: (YY/MM/DD)** 18/02/05 **Time** 7:00 **RECEIVED BY: (Signature/Print)** *Erin Smith* **Date: (YY/MM/DD)** 18/02/06 **Time** 9:00 **# Jars used and not submitted** **Lab Use Only**
Time Sensitive ☐ Temperature (°C) on Receipt 20.1 Custody Seal Intact on Cooler? ☐ Yes ☒ No *1/1*
White: Maxxam Yellow: Client

* UNLESS OTHERWISE AGREED TO IN WRITING, WORK SUBMITTED ON THIS CHAIN OF CUSTODY IS SUBJECT TO MAXXAM'S STANDARD TERMS AND CONDITIONS. SIGNING OF THIS CHAIN OF CUSTODY DOCUMENT IS ACKNOWLEDGMENT AND ACCEPTANCE OF OUR TERMS WHICH ARE AVAILABLE FOR VIEWING AT WWW.MAXXAM.CA/TERMS.
* IT IS THE RESPONSIBILITY OF THE RELINQUISHER TO ENSURE THE ACCURACY OF THE CHAIN OF CUSTODY RECORD. AN INCOMPLETE CHAIN OF CUSTODY MAY RESULT IN ANALYTICAL TAT DELAYS.

Maxxam
A Bureau Veritas Group Company

Maxxam Analytics International Corporation o/a Maxxam Analytics
4606 Canada Way, Burnaby, British Columbia Canada V5G 1K5 Tel: (604) 734 7276 Toll-free 800-563-6266 Fax: (604) 731 2386 www.maxxam.ca

INVOICE TO:
Company Name: #1433 TETRA TECH CANADA INC.
Contact Name: Darren Thomas
Address: #1 - 4376 BOBAN DRIVE
NANAIMO BC V9T 6A7
Phone: (250) 756-2256 x Fax: (250) 756-2686 x
Email: Darren.Thomas@tetratech.com; EBA.Labdata@tetratec

Report Information
Company Name: Darren Thomas
Contact Name: Darren Thomas
Address: Darren.Thomas@tetratech.com; EBA.Labdata@tetratec

Project Information
Quotation #: B71611
P.O. #: ENW VENW03150-01
Project #: SD68 New testing
Project Name: SD68 New testing
Site #: Darren Thomas
Sampled By: Darren Thomas

Barcode
B809186_COC
C#546212-04-01
Letitia Prefontaine

Regulatory Criteria:
☐ CSR
☐ CCME
☐ BC Water Quality
☒ Other Health Canada

Special Instructions

ANALYSIS REQUESTED (PLEASE BE SPECIFIC)

Turnaround Time (TAT) Required:
Please provide advance notice for rush projects.
Regular (Standard) TAT:
(will be applied if Rush TAT is not specified):
Standard TAT = 5-7 Working days for most tests.
Please note: Standard TAT for certain tests such as BOD and Dioxins/Furans are > 5 days - contact your Project Manager for details.
Job Specific Rush TAT (if applies to entire submission)
1 DAY ☐ 2 Day ☐ 3 Day ☐ Date Required: ☐
Rush Confirmation Number: (call lab for #)
of Bottles: Comments:

SAMPLES MUST BE KEPT COOL (< 10°C) FROM TIME OF SAMPLING UNTIL DELIVERY TO MAXXAM

Sample Barcode Label	Sample (Location) Identification	Date Sampled	Time Sampled	Matrix	Metals Field Filtered ? (Y/N)	Lead - Drinking Water
1	UP13-Os	18/02/05	3:00pm	water	N	X
2	UP14-Os	↓	↓	↓	N	X
3	UP15-Os	↓	↓	↓	N	+
4	UP16-Os	↓	↓	↓	N	X
5						
6						
7						
8						
9						
10						

RELINQUISHED BY: (Signature/Print) *Darren Thomas* **Date: (YY/MM/DD)** 18/02/05 **Time** 7:00

RECEIVED BY: (Signature/Print) *S. Simon* **Date: (YY/MM/DD)** 18/02/06 **Time** 9:00

jars used and not submitted ☐ **Time Sensitive** ☐ **Temperature (°C) on Receipt** 2.0.1

Lab Use Only
Custody Seal Intact on Cooler? ☐ Yes ☒ No *N/A*
White: Maxxam Yellow: Client

* UNLESS OTHERWISE AGREED TO IN WRITING, WORK SUBMITTED ON THIS CHAIN OF CUSTODY IS SUBJECT TO MAXXAM'S STANDARD TERMS AND CONDITIONS. SIGNING OF THIS CHAIN OF CUSTODY DOCUMENT IS ACKNOWLEDGMENT AND ACCEPTANCE OF OUR TERMS WHICH ARE AVAILABLE FOR VIEWING AT WWW.MAXXAM.CA/TERMS.
* IT IS THE RESPONSIBILITY OF THE RELINQUISHER TO ENSURE THE ACCURACY OF THE CHAIN OF CUSTODY RECORD. AN INCOMPLETE CHAIN OF CUSTODY MAY RESULT IN ANALYTICAL TAT DELAYS.